



**Free Questions for D-SNC-DY-00 by certsdeals**

**Shared by Greer on 12-08-2024**

**For More Free Questions and Preparation Resources**

**Check the Links on Last Page**

# Question 1

---


**Question Type:** MultipleChoice

---

SIMULATION

Configure a VRF called "VrfGreen" and the static route in it to network 172.16.128.64/28 through next-hop 10.10.10.1. Set an administrative distance of 213.

```
sonic#
```

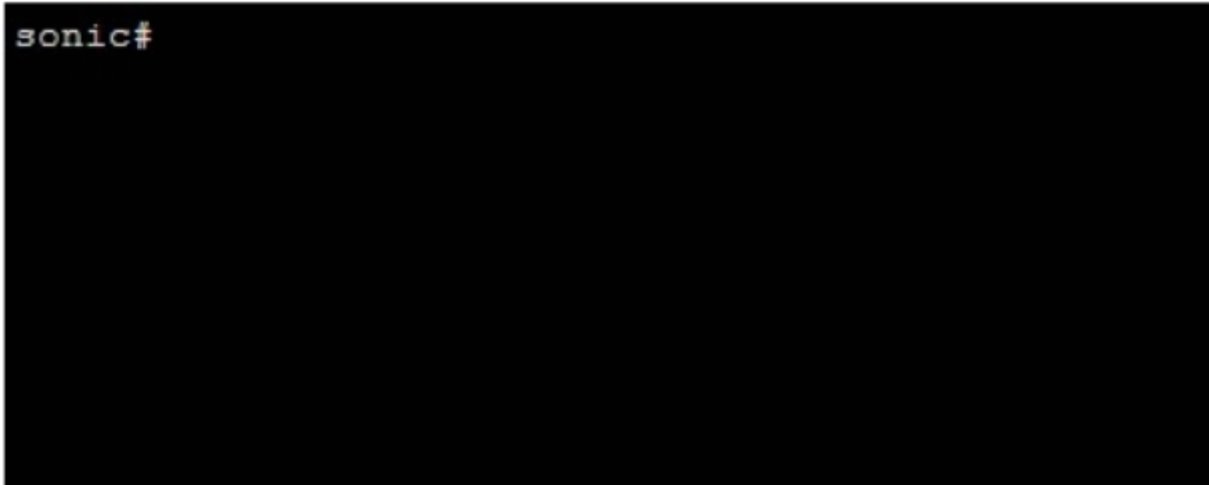

**Options:**

---

**A-** see the explanation for all step by step solution with all explanation

## Answer:

---

A

## Explanation:

---

Here are the steps to configure the VRF and the static route:

Enter Configuration Mode:

```
sonic# configure terminal
```

Create VRF 'VrfGreen':

```
sonic(config)# ip vrf VrfGreen
```

Configure the Static Route:

```
sonic(config)# ip route vrf VrfGreen 172.16.128.64/28 10.10.10.1 213
```

Save Configuration:

```
sonic# write memory
```

Comprehensive Detailed Step by Step Explanation with Reference:

Enter Configuration Mode:

Begin by entering the global configuration mode to make changes to the switch configuration.

Create VRF 'VrfGreen':

Use the command `ip vrf VrfGreen` to create a new VRF named 'VrfGreen'. This command sets up a new VRF instance which will isolate the routing table for this VRF from the global routing table and other VRFs.

Configure the Static Route:

Use the command `ip route vrf VrfGreen 172.16.128.64/28 10.10.10.1 213` to configure the static route.

`ip route vrf VrfGreen` specifies that the route should be added to the 'VrfGreen' VRF.

172.16.128.64/28 is the destination network.

10.10.10.1 is the next-hop IP address.

213 is the administrative distance, which in this case is set to a non-default value to influence route preference.

Save Configuration:

Save the configuration to ensure the changes persist after a reboot using the `write memory` command.

[Dell Technologies Networking - SONiC](#)

[Dell Enterprise SONiC Deployment Guide](#)

These steps provide a comprehensive guide to configure a VRF and a static route within that VRF on a SONiC-based switch, ensuring the specific requirements for routing and administrative distance are met.

## Question 2

---

**Question Type:** MultipleChoice

---

SIMULATION

A customer must configure a peer link between two switches in the L2 MC-LAG scenario.

SwitchB has already been configured. Configure the peer link on SwitchA.

Use the following configuration information:

MC-LAG domain 1

VLAN 101


Peer link Port-Channel 100

SwitchA IP: 192.168.1.1/24

SwitchB IP: 192.168.1.2/24

MC-LAG system MAC: 00:00:00:11:11:11

 The physical ports to connect the peer switch are Eth 1/5 and Eth 1/6 for each switch.

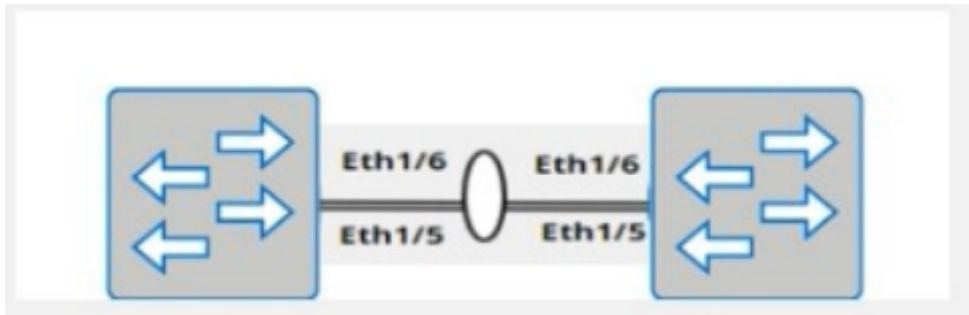

```
SwitchA#
```

Options:

---

**A-** see the explanation for all step by step solution with all explanation

## **Answer:**

---

A

## **Explanation:**

---

Here are the steps to configure the peer link on SwitchA:

Enter Configuration Mode:

SwitchA# configure terminal

Create VLAN 101:

SwitchA(config)# vlan 101

Create Port-Channel 100:

SwitchA(config)# interface port-channel 100

SwitchA(config-if-po100)# switchport mode trunk

SwitchA(config-if-po100)# switchport trunk allowed vlan 101

SwitchA(config-if-po100)# exit

Assign Physical Interfaces to Port-Channel 100:

```
SwitchA(config)# interface ethernet 1/5
```

```
SwitchA(config-if-eth1/5)# channel-group 100 mode active
```

```
SwitchA(config-if-eth1/5)# exit
```

```
SwitchA(config)# interface ethernet 1/6
```

```
SwitchA(config-if-eth1/6)# channel-group 100 mode active
```

```
SwitchA(config-if-eth1/6)# exit
```

Configure MC-LAG Domain 1:

```
SwitchA(config)# mclag domain 1
```

```
SwitchA(config-mclag-domain)# peer-link port-channel 100
```

```
SwitchA(config-mclag-domain)# local-ip 192.168.1.1
```

```
SwitchA(config-mclag-domain)# peer-ip 192.168.1.2
```

```
SwitchA(config-mclag-domain)# system-mac 00:00:00:11:11:11
```

```
SwitchA(config-mclag-domain)# exit
```

Save Configuration:



SwitchA# write memory

Comprehensive Detailed Step by Step Explanation with Reference:

Enter Configuration Mode:

Begin by entering the global configuration mode to make changes to the switch configuration.

Create VLAN 101:

Create VLAN 101 to be used for the MC-LAG peer link communication.

Create Port-Channel 100:

Enter the port channel interface configuration mode using interface port-channel 100.

Set the port channel to trunk mode with switchport mode trunk.

Allow VLAN 101 on the trunk with switchport trunk allowed vlan 101.

Exit the port channel interface configuration mode.

Assign Physical Interfaces to Port-Channel 100:

Enter interface configuration mode for ethernet 1/5 and assign it to port channel 100 using the channel-group 100 mode active command.

Exit the interface configuration mode.

Repeat the same steps for ethernet 1/6.

Configure MC-LAG Domain 1:

Enter the MC-LAG domain configuration mode using `mclag domain 1`.

Specify the peer link port channel with `peer-link port-channel 100`.

Configure the local IP address as 192.168.1.1 using `local-ip 192.168.1.1`.

Configure the peer IP address as 192.168.1.2 using `peer-ip 192.168.1.2`.

Set the MC-LAG system MAC address using `system-mac 00:00:00:11:11:11`.

Exit the MC-LAG domain configuration mode.

Save Configuration:

Save the configuration to ensure the changes persist after a reboot using the `write memory` command.

[Dell Technologies Networking - SONiC](#)

[Dell Enterprise SONiC Deployment Guide](#)

These steps provide a comprehensive guide to configure the peer link for an MC-LAG scenario on SwitchA, ensuring the specific requirements for IP addressing, VLAN configuration, and port channel setup are met.

## Question 3

---

**Question Type: MultipleChoice**


---

SIMULATION

VLAN 40 is configured in Switch A with an anycast-address of 192.168.40.254/24. The ARP neighbor suppression is enabled. Use the simulator to create a VTEP named vtep1 and assign an IP address of

10.10.10.1. Map the VNI 400 to VLAN 40.

```
SwitchA#
```

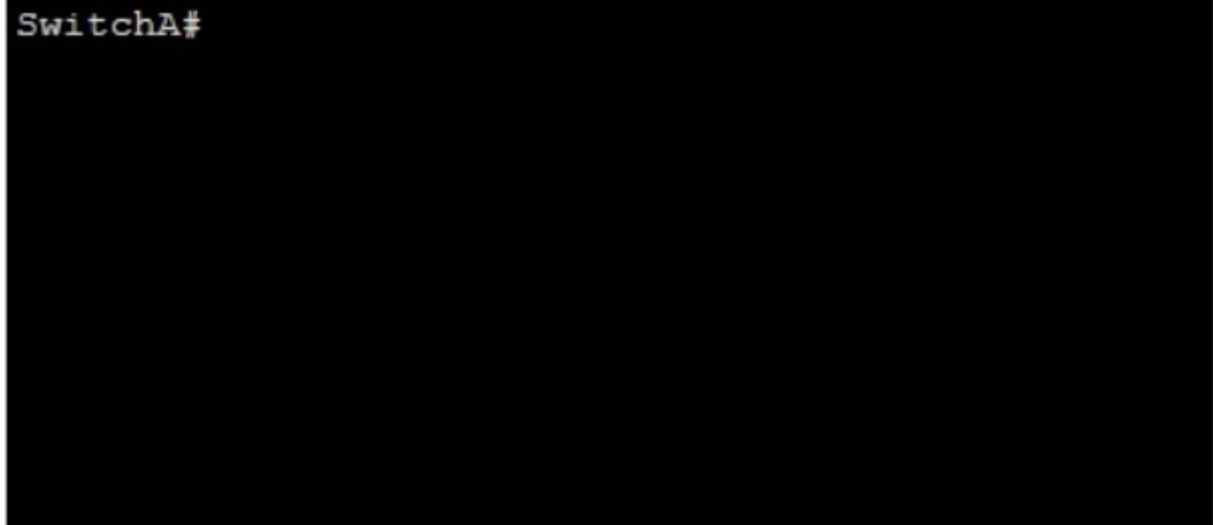

**Options:**

---

**A-** see the explanation for all step by step solution with all explanation

## **Answer:**

---

A

## **Explanation:**

---

Here are the steps to create the VTEP and map the VNI to the VLAN:

Enter Configuration Mode:

```
SwitchA# configure terminal
```

Create VTEP Interface:

```
SwitchA(config)# interface vtep1
```

```
SwitchA(config-if-vtep1)# ip address 10.10.10.1/24
```

```
SwitchA(config-if-vtep1)# exit
```

Map VNI 400 to VLAN 40:

```
SwitchA(config)# vlan 40
```

```
SwitchA(config-vlan)# vn-segment 400
```

```
SwitchA(config-vlan)# exit
```

Enable ARP Neighbor Suppression:

```
SwitchA(config)# interface Vlan40
```

```
SwitchA(config-if-Vlan40)# ip address 192.168.40.254/24
```

```
SwitchA(config-if-Vlan40)# vxlan arp-suppression
```

```
SwitchA(config-if-Vlan40)# exit
```

Save Configuration:

```
SwitchA# write memory
```

Enter Configuration Mode:

Begin by entering the global configuration mode to make changes to the switch configuration.

Create VTEP Interface:

Enter the interface configuration mode for the VTEP interface named vtep1 using interface vtep1.

Assign the IP address 10.10.10.1/24 to the VTEP interface using the ip address command.

Exit the interface configuration mode.

Map VNI 400 to VLAN 40:

Enter the VLAN configuration mode for VLAN 40 using vlan 40.

Map the VNI 400 to VLAN 40 using the vn-segment 400 command.

Exit the VLAN configuration mode.

Enable ARP Neighbor Suppression:

Enter the interface configuration mode for VLAN 40 using interface Vlan40.

Assign the anycast IP address 192.168.40.254/24 to the VLAN interface using the ip address command.

Enable ARP neighbor suppression using the vxlan arp-suppression command.

Exit the interface configuration mode.

Save Configuration:

Save the configuration to ensure the changes persist after a reboot using the write memory command.

[Dell Technologies Networking - SONiC](#)

[Dell Enterprise SONiC Deployment Guide](#)

These steps provide a comprehensive guide to configure a VTEP and map the VNI to VLAN 40 on Switch A, ensuring the specific requirements for IP addressing and ARP neighbor suppression are met.

## Question 4

---

**Question Type:** MultipleChoice

---

### SIMULATION

Create port channel 10 on interfaces Eth 1/11 and 1/12, so that it connects to an already configured switch. A server will be connected on Eth 1/1. Both the server and port channel need VLAN 1 untagged and only VLAN 10 tagged.

Complete the configuration on Switch A.

Switch A

Switch B



1/1

1/11

1/12

1/1

Server A

Server B



```
SwitchA#
```

**Options:**

---

**A-** see the explanation for all step by step solution with all explanation

**Answer:**

---

A

## **Explanation:**

---

Here are the steps to configure the required port channel and VLAN settings on Switch A:

Enter Configuration Mode:

```
SwitchA# configure terminal
```

Create Port Channel 10:

```
SwitchA(config)# interface port-channel 10
```

```
SwitchA(config-if-po10)# switchport mode trunk
```

```
SwitchA(config-if-po10)# switchport trunk native vlan 1
```

```
SwitchA(config-if-po10)# switchport trunk allowed vlan 1,10
```

Assign Interfaces Eth 1/11 and Eth 1/12 to Port Channel 10:

```
SwitchA(config)# interface ethernet 1/11
```

```
SwitchA(config-if-eth1/11)# channel-group 10 mode active
```

```
SwitchA(config-if-eth1/11)# exit
```

```
SwitchA(config)# interface ethernet 1/12
```

```
SwitchA(config-if-eth1/12)# channel-group 10 mode active
```

```
SwitchA(config-if-eth1/12)# exit
```

Configure Interface Eth 1/1 for Server Connection:

```
SwitchA(config)# interface ethernet 1/1
```

```
SwitchA(config-if-eth1/1)# switchport mode trunk
```

```
SwitchA(config-if-eth1/1)# switchport trunk native vlan 1
```

```
SwitchA(config-if-eth1/1)# switchport trunk allowed vlan 1,10
```

```
SwitchA(config-if-eth1/1)# end
```

Save Configuration:

```
SwitchA# write memory
```

Comprehensive Detailed Step by Step Explanation with Reference:

Enter Configuration Mode:

Start by entering the global configuration mode to make changes to the switch configuration.

Create Port Channel 10:

Enter the port channel interface configuration mode using interface port-channel 10.

Set the port channel to trunk mode with switchport mode trunk.

Specify VLAN 1 as the native VLAN (untagged) using switchport trunk native vlan 1.

Allow VLANs 1 and 10 on the trunk with switchport trunk allowed vlan 1,10.

Assign Interfaces Eth 1/11 and Eth 1/12 to Port Channel 10:

Enter interface configuration mode for ethernet 1/11 and ethernet 1/12.

Assign each interface to port channel 10 using the channel-group 10 mode active command.

Exit the interface configuration mode.

Configure Interface Eth 1/1 for Server Connection:

Enter interface configuration mode for ethernet 1/1.

Set the interface to trunk mode with switchport mode trunk.

Specify VLAN 1 as the native VLAN using switchport trunk native vlan 1.

Allow VLANs 1 and 10 on the trunk with switchport trunk allowed vlan 1,10.

Exit the configuration mode.

Save Configuration:

Ensure the configuration is saved so it persists after a reboot using the write memory command.

These steps provide a comprehensive guide to configure a port channel and VLAN settings on Switch A to meet the specified requirements for server and trunk connections.

## Question 5

---

**Question Type:** MultipleChoice

---

### SIMULATION

Use the simulator to perform the following configuration task.

1. Map a single-tagged CVLAN 100 to SVLAN 200 translation on PE

switch interface Eth1/1.

2. Map a double-tagged VLAN packet with an outer CVLAN 100 and an

inner dot1q 200 to SVLAN 300 translation on PE switch interface

Eth1/2.

The necessary VLANs and VLAN stacking have already been configured.

```
sonic#
```

**Options:**

---

A- see the explanation for all step by step solution with all explanation

**Answer:**

---

A

## **Explanation:**

---

Here are the steps to configure the required VLAN translations on a Dell SONiC switch:

Map a Single-Tagged CVLAN 100 to SVLAN 200 on Interface Eth1/1:

```
sonic# configure terminal
```

```
sonic(config)# interface Ethernet1/1
```

```
sonic(config-if-Ethernet1/1)# switchport mode trunk
```

```
sonic(config-if-Ethernet1/1)# switchport vlan mapping 100 200
```

```
sonic(config-if-Ethernet1/1)# end
```

```
sonic# write memory
```

Map a Double-Tagged VLAN Packet with Outer CVLAN 100 and Inner dot1q 200 to SVLAN 300 on Interface Eth1/2:

```
sonic# configure terminal
```

```
sonic(config)# interface Ethernet1/2
```

```
sonic(config-if-Ethernet1/2)# switchport mode trunk
```

```
sonic(config-if-Ethernet1/2)# switchport vlan mapping 100 200 300
```

```
sonic(config-if-Ethernet1/2)# end
```

sonic# write memory

Comprehensive Detailed Step by Step Explanation with Reference:

Enter Configuration Mode:

Access the global configuration mode using the configure terminal command.

Configure Interface Eth1/1:

Enter interface configuration mode for Ethernet1/1 using the command interface Ethernet1/1.

Set the switchport mode to trunk with the command switchport mode trunk.

Configure the VLAN translation using the switchport vlan mapping 100 200 command, which maps CVLAN 100 to SVLAN 200.

Exit the interface configuration mode by typing end.

Save the configuration with write memory.

Configure Interface Eth1/2:

Enter interface configuration mode for Ethernet1/2 using the command interface Ethernet1/2.

Set the switchport mode to trunk with the command switchport mode trunk.

Configure the double-tagged VLAN translation using the switchport vlan mapping 100 200 300 command, which maps packets with outer CVLAN 100 and inner dot1q 200 to SVLAN 300.



Exit the interface configuration mode by typing end.

Save the configuration with write memory.

[Dell Technologies Networking - SONiC](#)

[Dell Enterprise SONiC Deployment Guide](#)

These steps provide a comprehensive guide to configure VLAN translations on a Dell SONiC switch, ensuring that the specific requirements for single-tagged and double-tagged VLAN mappings are met.

## Question 6

---

**Question Type: MultipleChoice**

---

SIMULATION

Configure the system to meet these requirements.

- . Configure R1 with AS 1.
- . R1 must use a static neighbor assignment for BGP peering.
- . R1 needs to redistribute all current and future connected IPv4 routes.

All the required BGP configurations have already been completed on R2.

R2 resides in BGP AS 2.



R1#

**Options:**

---

**A-** see the explanation for all step by step solution with all explanation

**Answer:**

---

A

**Explanation:**

---

Here is the step-by-step configuration for R1:

Enter BGP Configuration Mode:

```
R1# configure terminal
```

```
R1(config)# router bgp 1
```

Configure the BGP Neighbor:

```
R1(config-router)# neighbor 10.10.12.2 remote-as 2
```

Redistribute Connected Routes into BGP:

```
R1(config-router)# redistribute connected
```

Exit BGP Configuration Mode and Save the Configuration:

```
R1(config-router)# end
```

```
R1# write memory
```

Comprehensive Detailed Step by Step Explanation with Reference:

Enter BGP Configuration Mode:

To configure BGP on R1, you need to enter global configuration mode and then enter BGP configuration mode with the AS number. Since R1 is in AS 1, you use the command `router bgp 1`.

Configure the BGP Neighbor:

BGP neighbors must be manually specified. In this case, R1's neighbor is R2, which has an IP address of 10.10.12.2 and resides in AS 2. The command `neighbor 10.10.12.2 remote-as 2` establishes this relationship.

Redistribute Connected Routes into BGP:

To ensure that all connected routes on R1 are advertised via BGP, you use the `redistribute connected` command. This ensures that any connected IPv4 routes are redistributed into BGP, meeting the requirement to advertise current and future connected routes.

Exit BGP Configuration Mode and Save the Configuration:

Once the configuration is complete, you exit BGP configuration mode by typing `end` and then save the configuration with the `write memory` command. This ensures that the changes persist after a reboot.

Cisco BGP Configuration Guide

[Dell Technologies Networking - SONiC](#)

[Dell Enterprise SONiC Deployment Guide](#)

These steps provide a comprehensive guide to configure R1 to meet the specified requirements for BGP peering and route redistribution.

 
## Question 7

---

**Question Type:** MultipleChoice

---

Refer to the exhibits.

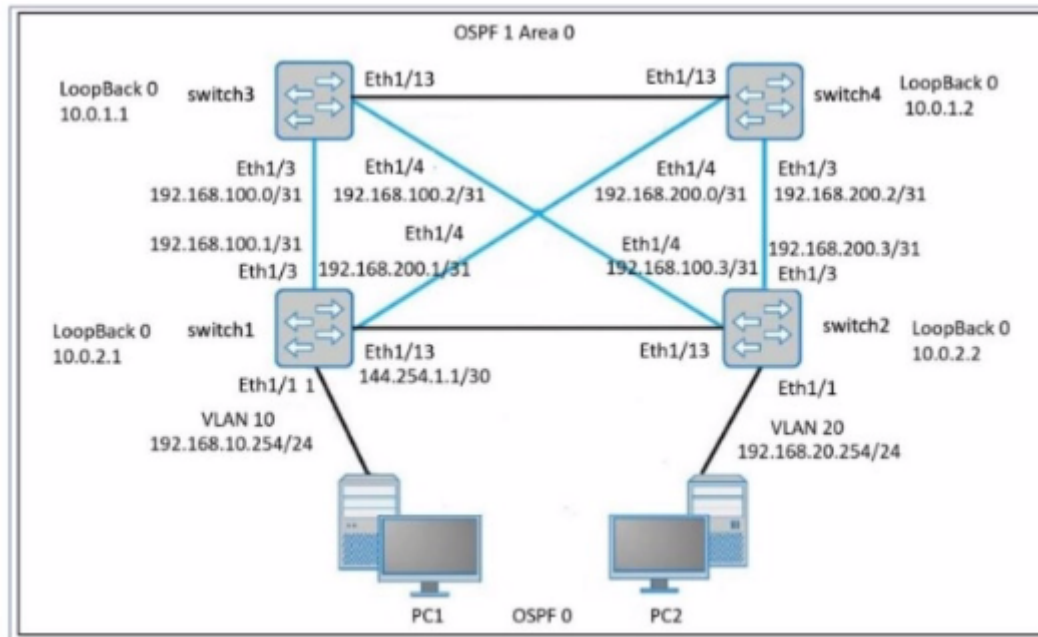

```

switch1# show ip route
Codes: K - kernel route, C - connected, S - static, B - BGP, O - OSPF
> - selected route, * - FIB route, q - queued route, r - rejected route,
-----
Destination          Gateway                Dist/Metric    Last Update
-----
O>* 10.0.1.1/32        via 192.168.100.0      Eth1/3         110/10010     00:02:53 ago
O>* 10.0.1.2/32        via 192.168.100.0      Eth1/4         110/10010     00:03:03 ago
O   10.0.2.1/32        via 0.0.0.0           Loopback0      110/10        00:20:55 ago
C>* 10.0.2.1/32        Direct                Loopback0      0/0           00:50:58 ago
O>* 10.0.2.2/32        via 192.168.100.0      Eth1/3         110/20010     00:02:28 ago
*   192.168.200.0/24   via 192.168.200.0      Eth1/4
C>* 144.54.1.0/30     Direct                Eth1/13        0/0           00:32:53 ago
C>* 192.168.10.0/24    Direct                Vlan10         0/0           00:18:04 ago
O>  192.168.100.0/31   Direct                Eth1/3         110/10000     00:19:31 ago
C>* 192.168.100.0/31   Direct                Eth1/3         0/0           00:19:31 ago
O>* 192.168.100.2/31   via 192.168.100.0      Eth1/3         110/20000     00:02:53 ago
O   192.168.200.0/31   Direct                Eth1/4         110/10000     00:18:46 ago
C>* 192.168.200.0/31   Direct                Eth1/4         0/0           00:18:46 ago
O>* 192.168.200.2/31   via 192.168.200.0      Eth1/4         110/20000     00:03:03 ago

```

PC1 has a valid address on the 192.168.10.0 network, and PC2 has a valid address on the 192.168.20.0 network.

What happens when a ping command is issued between PC1 and PC2?

### Options:

- 
- A-** The ping is successful because there is a route to 10.0.1.1, which is connected to 1(10.2.2, which is connected to PC2.
  - B-** The ping is unsuccessful because there is no route to the VLAN 10 gateway address of 192.168.10.254.
  - C-** The ping is successful because there are two routes from switch1 to switch2 which are connected to PC2.
  - D-** The ping is unsuccessful because there is no route from switch 1 to the 192.168.20.0 network.

## Answer:

---

D

## Explanation:

---

Network Topology Analysis:

PC1 is on VLAN 10 with an IP address in the 192.168.10.0/24 subnet.

PC2 is on VLAN 20 with an IP address in the 192.168.20.0/24 subnet.

The network uses OSPF for routing between the switches.

The OSPF area is 0, and all switches have loopback interfaces for OSPF.

Routing Table Examination (from switch1):

The show ip route command output from switch1 provides a detailed look at the routing table.

Routes to the 192.168.10.0/24 network (directly connected via Vlan10) are present.

No routes to the 192.168.20.0/24 network are listed in switch1's routing table.

For PC1 to communicate with PC2, switch1 must have a route to the 192.168.20.0/24 network.

The absence of a route to the 192.168.20.0/24 network in switch1's routing table means that switch1 cannot forward packets destined for 192.168.20.0/24.



Therefore, any ping from PC1 to PC2 will be unsuccessful as switch1 does not know how to route packets to PC2's network.

Verification with Dell SONiC:

In Dell SONiC environments, OSPF is configured to ensure dynamic routing.

The configuration must include all necessary networks for inter-switch routing.

If a network (like 192.168.20.0/24) is not included in OSPF configurations on switch1, routes to that network will not be advertised or learned, leading to failed connectivity tests like the ping from PC1 to PC2.

[Dell Enterprise SONiC Deployment Guide](#)

[Dell Technologies Networking - SONiC](#)

Topic 2, SIMULATION / Lab based

## Question 8

---

**Question Type:** MultipleChoice

---

What interface must be selected when configuring the management port from within the MF-CLI environment?

### Options:

---

- A- mgmt 1/1/1
- B- ma 0/1
- C- Management 0
- D- eth0

### Answer:

---

D

### Explanation:

---

Dell SONiC Management Interface Configuration:

In Dell SONiC, the management port configuration is a crucial aspect that allows administrators to access and manage the network device.

The management interface typically provides out-of-band management access to the device, ensuring that even if the data network is down, the management network can still be accessed.

Common Interface Naming Conventions:

mgmt 1/1/1: This naming convention is not typically used in Dell SONiC environments for management interfaces.

ma 0/1: This could be a potential naming convention but is not standard for Dell SONiC.

Management 0: This is a logical name but does not align with the standard interface naming conventions used in Dell SONiC.

eth0: This is the standard naming convention used for the primary management interface in most Linux-based systems, including Dell SONiC.

Verification with Dell SONiC Documentation:

Dell SONiC documentation specifies that the management interface is usually named eth0.

When accessing the management interface within the MF-CLI (Management Framework Command Line Interface) environment, eth0 is the correct interface to configure.

Practical Configuration Example:

When configuring the management port, the command might look something like:

```
config interface ip add eth0 <management_ip_address>/<subnet_mask>
```

This command specifies the management interface eth0 and assigns it an IP address for network management purposes.

[Dell Enterprise SONiC Deployment Guide](#)

[Dell Technologies Networking - SONiC](#)

This detailed step-by-step explanation confirms that the correct answer is D, providing insights into the typical interface naming conventions and configuration practices within the Dell SONiC environment.

## Question 9

---

**Question Type:** MultipleChoice

---

What is the impact of entering the qos-mode uniform command on a VTEP interface?

### Options:

---

- A- The DCSP values for the local and remote VTEPs are synchronized.
- B- The local VNI value is aligned to the VNI of the remote VTEP interface.
- C- A uniform VNI value is configured on local and remote VTEP interfaces.
- D- The payload DSCP value is copied to the outer header DSCP value.

### Answer:

---

D

### Explanation:

---

Entering the qos-mode uniform command on a VTEP interface ensures that the DSCP (Differentiated Services Code Point) value of the payload is copied to the outer header DSCP value. This maintains the Quality of Service (QoS) markings across the VXLAN tunnel, allowing consistent traffic prioritization.

Dell Technologies SONiC documentation

VXLAN and QoS Configuration Guide

## Question 10

---

**Question Type:** MultipleChoice

---

What is the purpose of the write erase boot command option?

### Options:

---

- A-** Delete the startup and enable zero touch provisioning.
- B-** Remove user-installed packages and tile changes.
- C-** Delete the startup configuration and the management interface configuration.

**D-** Delete the running configuration and all user accounts.

**Answer:**

---

A

**Explanation:**

---

The write erase boot command option deletes the startup configuration and enables zero touch provisioning (ZTP). This is used to reset the switch to its default state and prepare it for automated configuration through ZTP.

Dell Technologies SONiC Command Reference Guide

Switch Configuration Guide

## Question 11

---

**Question Type:** MultipleChoice

---

What is a correct use-case scenario for ZTP in Enterprise SONiC?

### Options:

---

- A- The user wants single pane of glass monitoring.
- B- The user wants to replace a failed unit and use an automatic script.
- C- The user wants multivendor switch deployment.
- D- The user wants to configure the switch manually using the CLI.

### Answer:

---

B

### Explanation:

---

ZTP (Zero Touch Provisioning) is used to automate the configuration of switches, especially useful in scenarios where a failed unit needs to be replaced. By using ZTP, the switch can automatically download and apply the necessary configuration scripts upon boot-up, reducing the need for manual intervention and speeding up the deployment process.

Dell Technologies SONiC documentation

Zero Touch Provisioning Guide

**To Get Premium Files for D-SNC-DY-00 Visit**

**<https://www.p2pexams.com/products/d-snc-dy-00>**

**For More Free Questions Visit**

**<https://www.p2pexams.com/dell-emc/pdf/d-snc-dy-00>**

