# Question 1

Which statement about access to HPE Onboard Administrator is true when an HPE BladeSystem enclosure is added to HPE OneView?

## Options:

**A-** It is blocked when an HPE BladeSystem enclosure is managed using HPE OneView.

**B-** It is enabled only when an HPE BladeSystem enclosure is monitored using HPE OneView.

**C-** It is enabled when an HPE BladeSystem is either managed or monitored using HPE OneView.

**D-** It is blocked when HPE BladeSystem enclosure is monitored using HPE OneView.

## Answer:

B

# Question 2

How can your customer implement HPE OneView so that it can be used to manage an HPE ProLiant server and HPE BladeSystem?

## Options:

**A-** As an application running on the server with Windows system.

**B-** As a physical appliance based on HPE ProLiant 360 Gen 10.

**C-** As an application running on the server with CentOS Linux system

**D-** As a virtual appliance running on the supported hypervisor.

## Answer:

D

# Question 3

**Question Type: MultipleChoice**

What step must be taken to add an HPE SuperDome Flex to an existing OneView environment

## Options:

**A-** A Rack Management Controller must be added to HPE OneView.

**B-** HPE Superdome Flex can be added to HPE OneView after at least one nPAR is created.

**C-** Each HPE Superdome Flex chassis must be added Individually using BMC IP.

**D-** HPE Superdome Flex complex can be added by adding base chassis of this complex.

## Answer:

A

# Question 4

**Question Type: MultipleChoice**

Your customer built a sever profile for HPE Synergy Gen 10 server and configured boot mode to Legacy BIOS. Which feature Is not available for this Compute Module?

## Options:

**A-** BIOS management

**B-** Workload profile

**C-** Boot from SAN

**D-** Secure boot

## Answer:

C

# Question 5

**Question Type:** **MultipleChoice**

Which parameters can be defined in a server profile template for HPE Synergy Compute Modules? (Select two.)

## Options:

**A-** partition layout for servers running Linux.

**B-** IL0 IPv4 or IPv6 address.

**C-** local storage and BIOS settings.

**D-** NIC teaming setup at OS level.

**E-** network and storage connectivity.
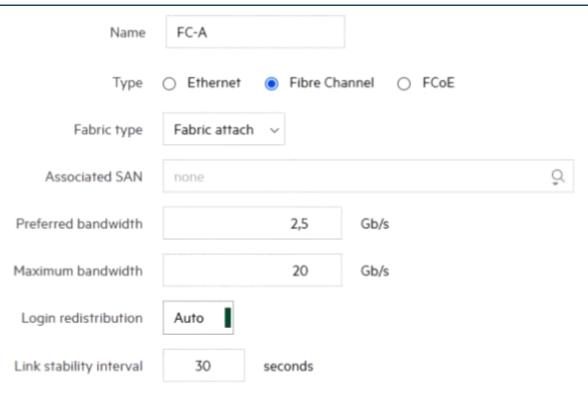
**Answer:**

C, E

# Question 6

**Question Type: Hotspot**

Click the option that must be configured for an HPE OneView when an HPE storage system is connected directly to an HPE Synergy frame.

## Create Network

| | |
|---|---|
| Name | FC-A |

Type  ○ Ethernet  ● Fibre Channel  ○ FCoE

Fabric type  [ Fabric attach ∨ ]

Associated SAN  [ none 🔍 ]

Preferred bandwidth  [ 2,5 ]  Gb/s

Maximum bandwidth  [ 20 ]  Gb/s

Login redistribution  [ Auto | ]

Link stability interval  [ 30 ]  seconds

Changed: Name to ...    **Create**    **Create +**    **Cancel**